


НАДСТРОЙКА С ПОЛКАМИ И ПРИСТАВКОЙ ДЛЯ МОНИТОРА


202.08.0XX (25x115)

202.07.0XX (25x80)

ИНСТРУКЦИЯ ПО СБОРКЕ

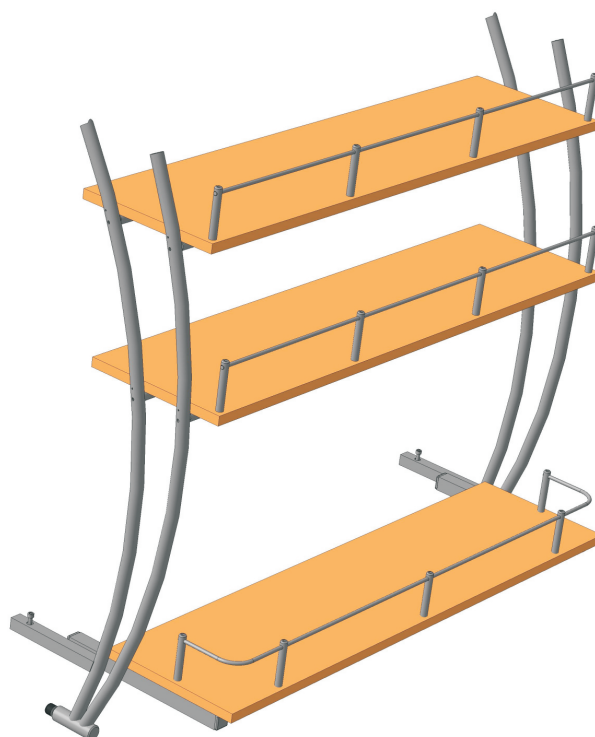



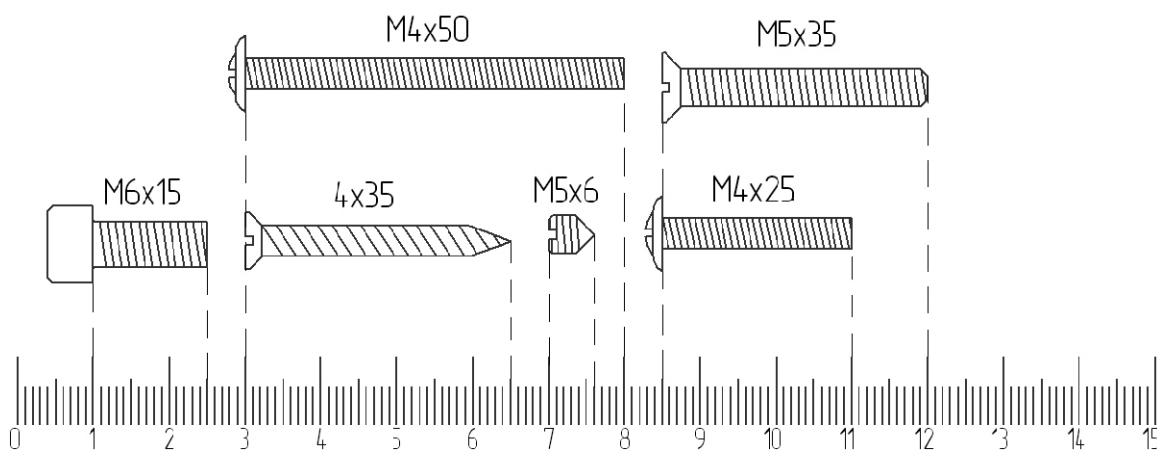




Обозначение крепежа



Необходимый инструмент




Фурнитура

<p>A</p>  <p>8x M5x35</p>	<p>B</p>  <p>13x M5x6</p>	<p>C</p>  <p>11x 4x25</p>	<p>D</p>  <p>12x 4x35</p>
<p>E</p>  <p>2x 4x50</p>	<p>F</p>  <p>2x M6x15</p>		

Комплектующие


1

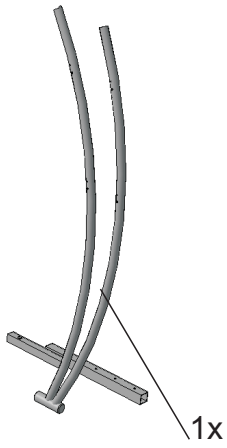


2




3

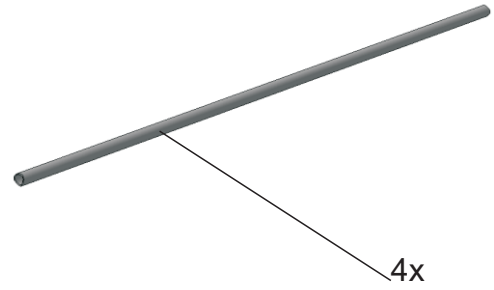

5

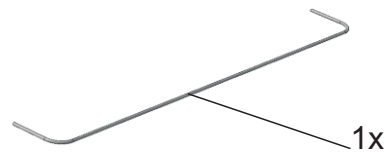

4

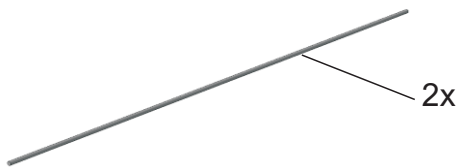


6



7




8

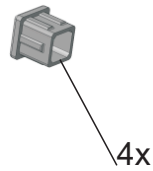


9




10

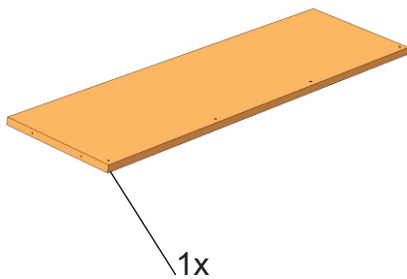


11

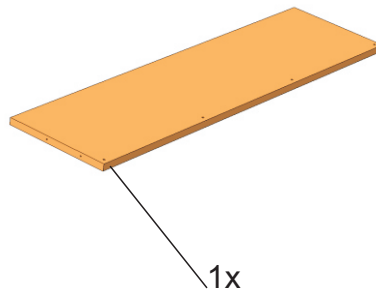


12

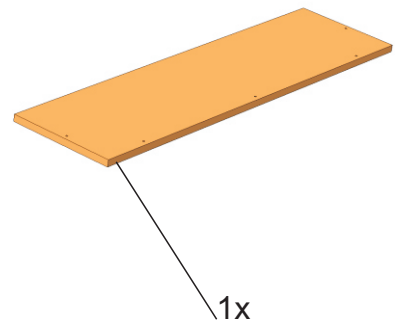

1

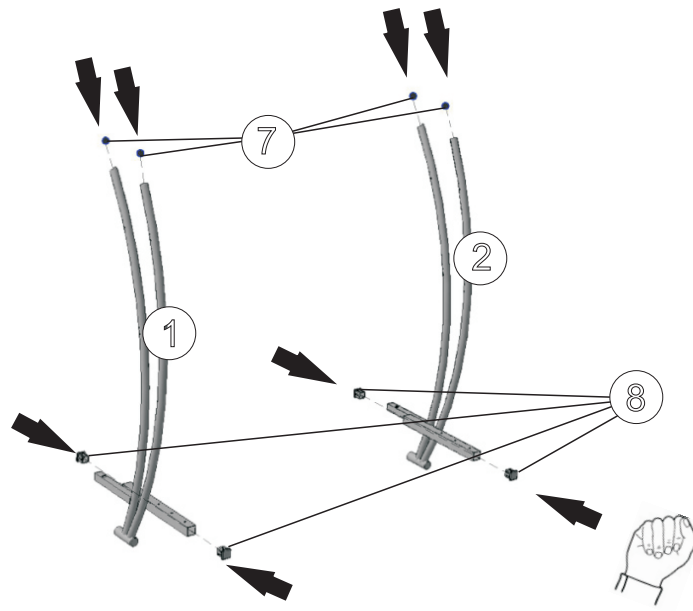



2

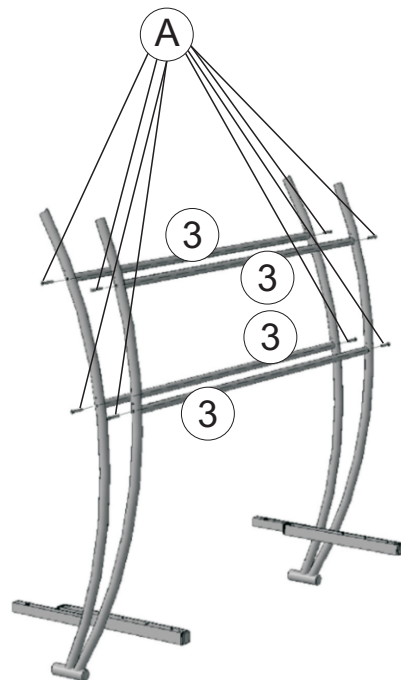

A
8x M5x35




3

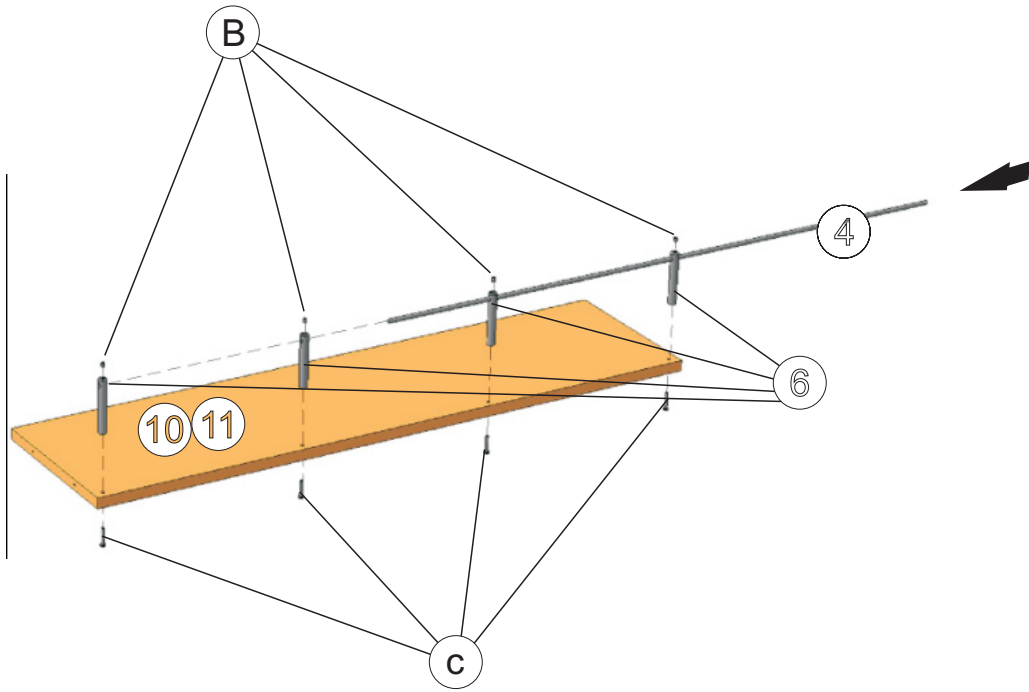


B		C	
8x	M5x6	8x	4x25

4

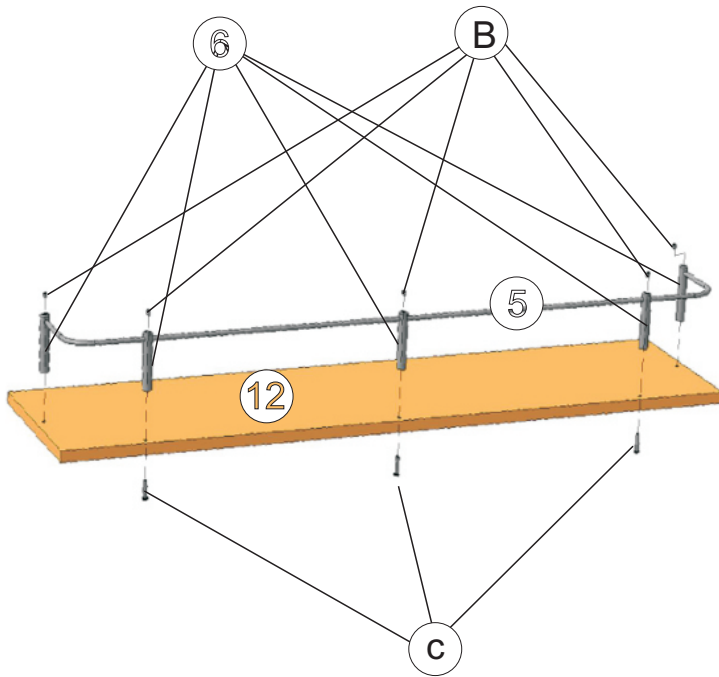



B		C	
5x	M5x6	3x	4x25

5

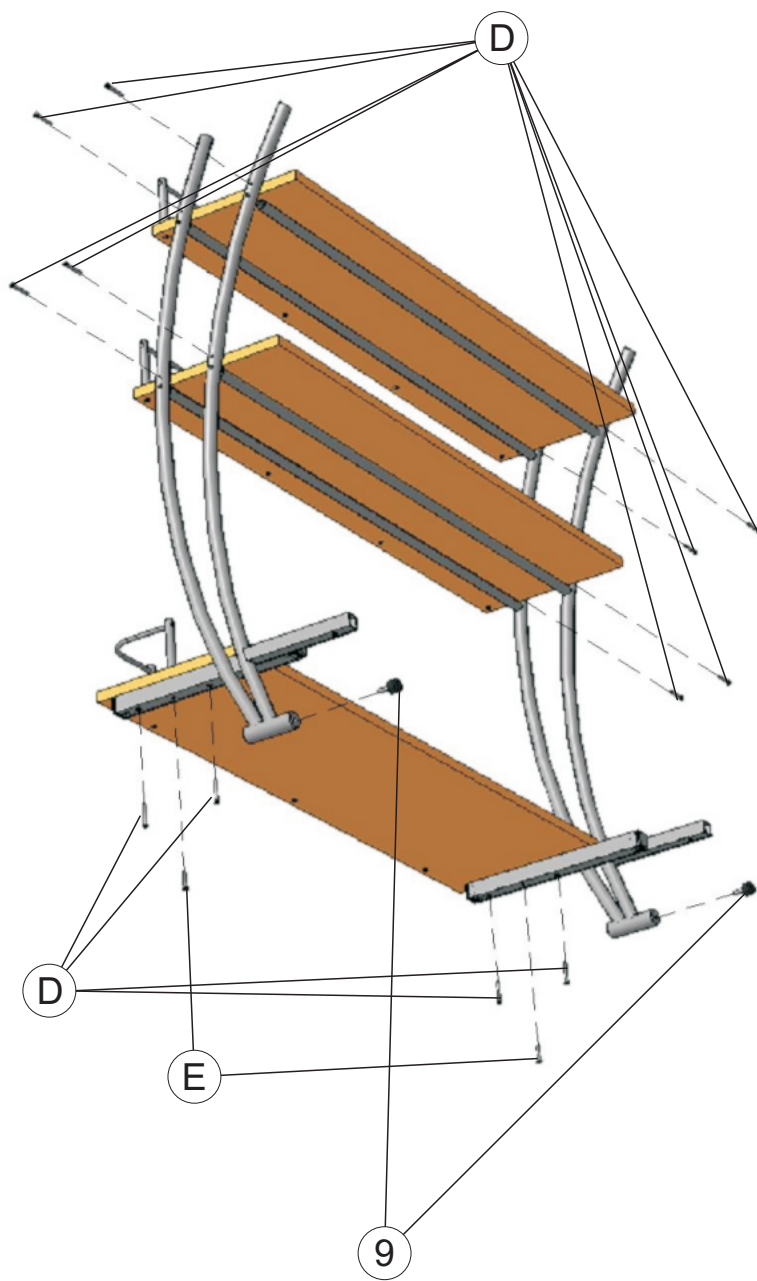

D 12x 4x35	E 2x 4x50
----------------------	---------------------

6

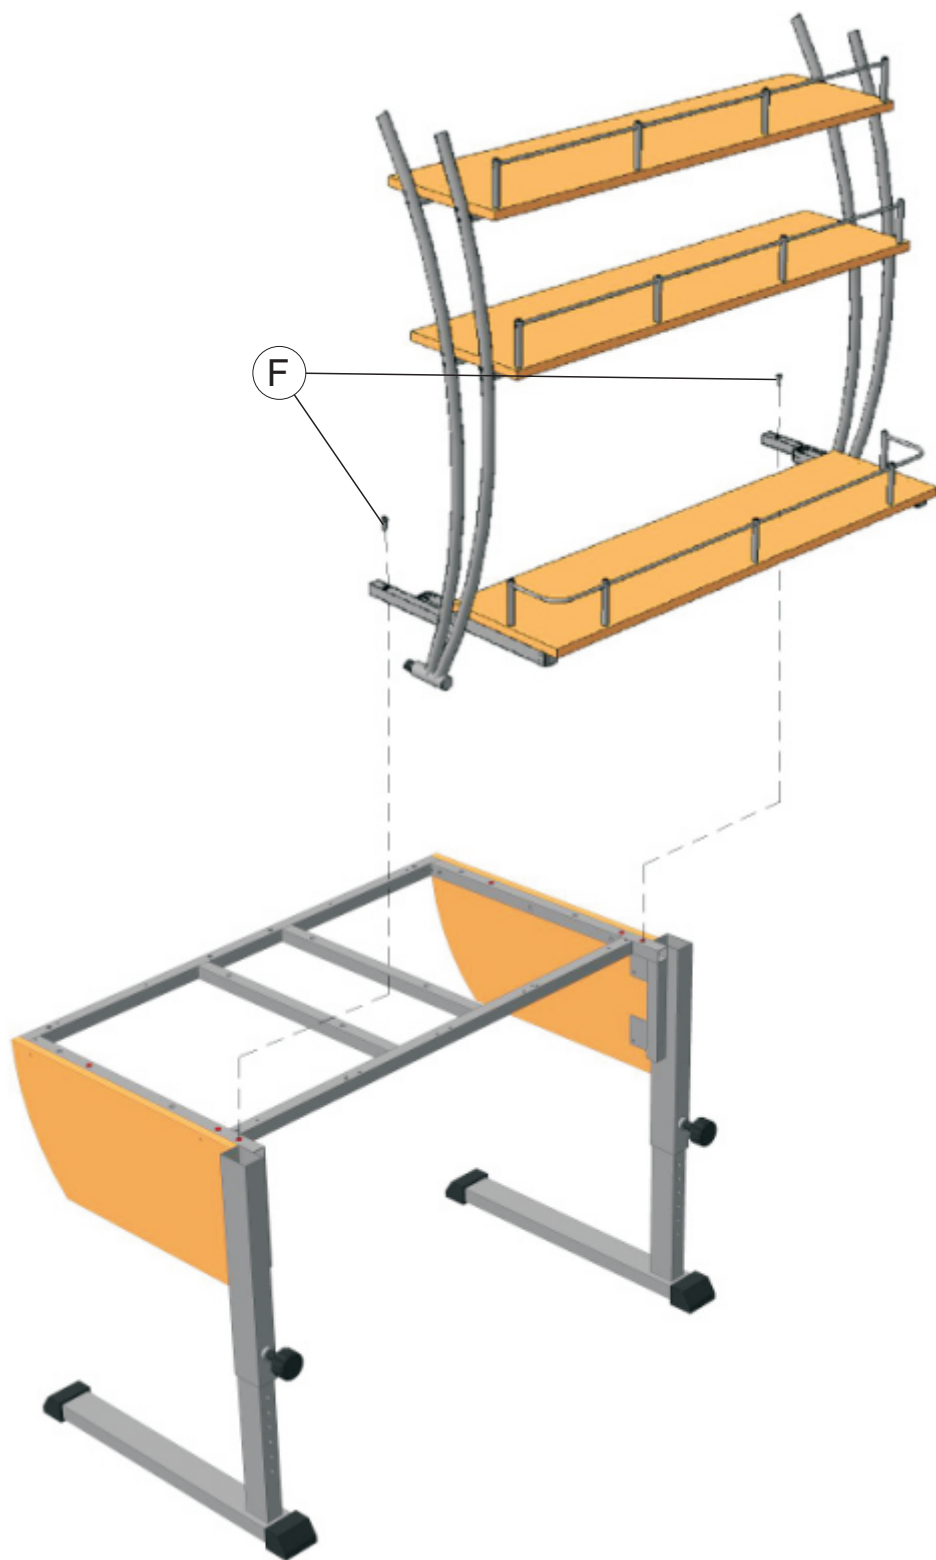

2x M6x15